

# Maintenance Guide LAMINATE FLOORING

**Do not steam clean or use a steam mop on the floor.**

## ***INITIAL CLEANING AFTER INSTALLATION***

- Remove any loose dirt or grit by sweeping or vacuuming.

## ***PREVENTATIVE MAINTENANCE***

- Most dirt comes from outdoors. Installing well suited doormats at the entranceways will help prevent potential dirt and moisture from entering the premises. To remain effective, doormats should be vacuumed daily.
- Legs on furniture, along with any angular edges, roller or castor chairs, large or heavy filing systems, and associated equipment require appropriate surface protection and should be placed on smooth protective pads to avoid damage to the flooring. Use mats and furniture protectors without latex or rubber backings to avoid possible discoloration.
- Choose colour carefully based on where the flooring will be used.
- Never use acetone or polish on flooring.
- For daily cleaning, we recommend vacuum cleaning.